

Precautions

1. When moving the machine, hold the bottom of the machine .
2. Please check the power specification before use.
3. Do not move or shake the machine during operation or when the power is on.
4. Please keep the machine upright.
5. Remove any liquid in the water storage room after each use .
6. Unplug the power cord when not in use.
7. Before the machine is kept in storage, remove any water and clean with cloth.
8. Do not pour water or other liquid into vent.
9. Do not try to repair the machine by yourself, please send it to the distributor for repair.
10. Do not use if the ceramic case is broken.

Trouble Shooting

A. When there is no mist at all, please turn of the power and check:

1. The water cannot be higher than the water level line.
2. If the ceramic piece is contaminated, clean with damp cotton swabs or cloth.
3. If anything other than essential oil is added, remove the water.
4. If there is still sound of fan working, check if the vent is obstructed.

B. In the following cases, please send the machine back to the distributor:

1. The sound of fan is louder than first purchased.
2. The power adapter is over-heated.
3. Water in the water storage room is over-heated.
4. LED lamp does not go off.
5. Power indicator does not function.

WARRANTY

Store stamp:

Salesperson

Model / Serial Number

Date of Purchase:

Notes:

1. We guarantee to provide limited warranty from regional distributor in 1 year since the date of purchase if the machine is under proper use.
2. If the breakdown were caused by improper use or not in the warranty period, we have the right to charge for the spare parts and other necessary costs.
3. A valid warranty must include the seal of the company, the salesperson's signature and the date of purchase.
4. Please keep the warranty properly. For free repair it is necessary to present the warranty.

SPEC

| | |
|---------------------|--|
| [Model] | LT09333-1, LT09333-2 |
| [Dimension] | 86 x 86 x 179 mm |
| [Weight] | 520g |
| [Power] | INPUT:AC100-240V 50/60Hz 0.5A OUTPUT:DC 12V 1A |
| [Power Consumption] | 10W, 100hrs operation is 1kw/h |
| [Frequency] | Ultrasonic Vibration 2.5MHz |
| [Material] | CAP : Porcelain · BASE : ABS SINK : PP · O-RING : Silicone LENS:PC |

aroma genie

AROMA GENIE - CASA
ULTRASONIC AROMA DIFFUSER
OPERATING INSTRUCTIONS



TOAST

Day & Day Trading Corp.
TEL: 886-2-22596698 FAX: 886-2-22597738
E-mail: info@toastliving.com
Add:20F/L, No. 495, Sec. 2, WenHua Road,
Banqiao City,Taipei County, Taiwan.

MADE IN TAIWAN


2011.01 05005-B2

Features of the machine


1. Diffuses the aroma by Ultrasonic oscillation without heating or burning the essential oil, which is safe and helps maintain the original effects of the essential oils.
2. The Ultrasonic water-oxygen diffuse produces a frequency of oscillation at 2.5 million times per second.
3. Makes the molecule of water and essential oil tiny so that it is easily absorbed by our body.
4. Provides anions, helps bring home the fresh atmosphere of nature
5. Combines the effects of aqua-therapy and aroma-therapy.
6. Can be used as a humidifier.
7. Purifies the air and provides a healthy and soothing environment.
8. User-friendly, with various settings to meet individual needs.
9. Unique venting design, prevents fogging the table surface nearby.
10. Designed by TOAST with a graceful styling, high quality and an excellent performance.

What's in the box

1. ceramic case
2. water stopping cap
3. LED lamp
4. Main Unit DE Receptacle
5. power adapter
6. measuring cup
7. user guide

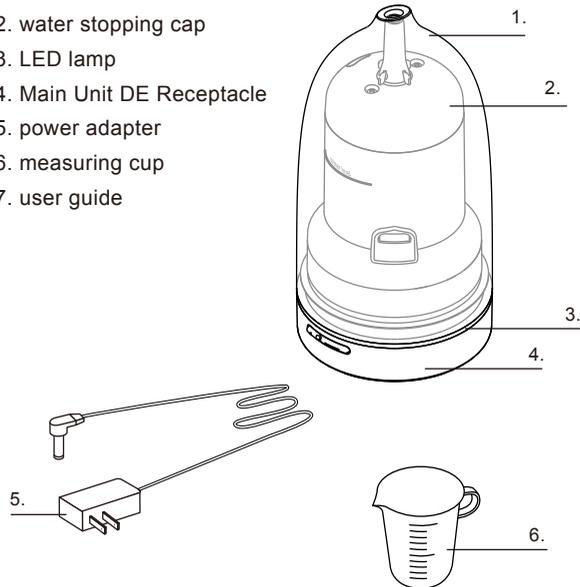

Parts

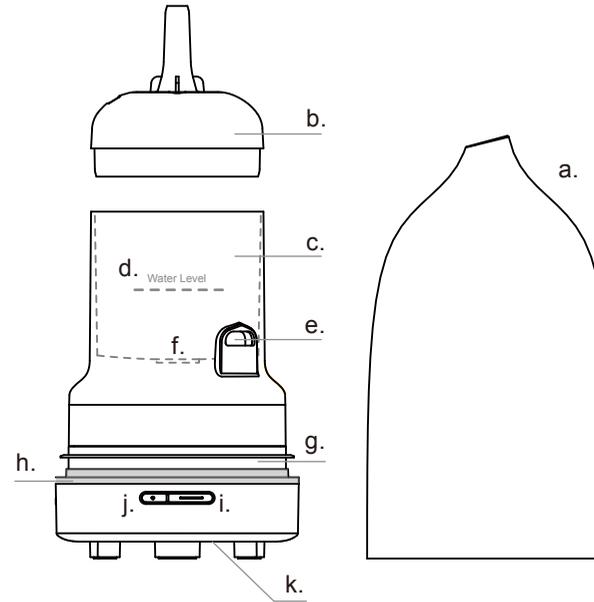

- | | |
|-----------------------|--------------------------------------|
| a. ceramic case | g. silicon ring |
| b. water stopping cap | h. LED lamp |
| c. water storage room | i. on/off button and power indicator |
| d. water level line | j. on/off button for night lamp |
| e. vent | k. power socket |
| f. ceramic piece | |

How to use it (with water not warmer than 55°C)

1. Connect power to (k) power socket .
2. Fill (c) water storage room with water, not higher than (d) water level line.
3. Add 4 to 5 drips of essential oil. (the amount of essential oil can be more or less according to the setting of the machine)
4. Put (b) water stopping cap.
5. Put (a) ceramic case, covering (g) silicon ring.
6. Push the on/off button and select the setting.

Power Indicator

☉ On/Off button

- 1st stage-continuous mode

 green light: continuous
automatically turns off after 3 hours

- 2nd stage-intervals of 30 secs mode

 orange light: intervals of 30 seconds
automatically turns off after 7 hours

- 3rd stage-power off

 no light: power off

☉ Night lamp

 LED night lamp on / LED night lamp off

Maintenance

1. Use tap water only / Do not use pure water or distilled water.
2. The amount of mist changes as the water goes down. The closer the water is to the water level line, the fewer the mist there is.
3. When water depletes, the machine turns off automatically.
4. Clean (c) water storage room before using different essential oil.
5. Use cotton swabs, cloth, or tissues to clean (c) water storage room and (b) water stopping cap if necessary.
6. Do not use any metal to scrape (f) ceramic piece. Clean with cotton swabs with alcohol.
7. Clean (c) water storage room and (f) ceramic piece regularly to avoid contamination.
8. Use damp cloth to clean the machine / Do not soak in water / No liquid is allowed in (e) vent.
9. (a) ceramic case can be clean with water but avoid any sharp object.